

## Quick Start Manual

### STEP 1

Position the PDU in an appropriate location.

### STEP 2

Connect the unit to a AC power source. Please check current requirements prior to starting the PDU.

### STEP 3

Plug the network cable into the network port, and the device will automatically obtain an IP address via DHCP.

### STEP 4

Should there be a specific IP address, navigate to the settings menus on the touch panel and enter the IP address,

### STEP 5

Enter the given IP address on the web browser (Google Chrome recommended) on the PC or Laptop.

### STEP 6

Enter default username = interface and password = 12345678.

You are now ready to remotely monitor and control the PDU.

### STEP 7

Initial installation is now complete.

You may need to configure additional settings to cater to your specific needs.

For additional details, or to download our free of charge software. Please contact [pdu.techsupport@icpl.co.in](mailto:pdu.techsupport@icpl.co.in)

Please ensure that the product serial number or part number is readily available.

Please refer PDU Installation Guide for installation.

